

## **BOLLARD WAREHOUSE**<sup>TM</sup>



P.O. Box 298
BATAVIA, IL 60510
PHONE 877-727-7347
FAX 800-814-7194

# GENERAL WARNINGS AND CAUTIONARY STATEMENTS COLLAPSIBLE BOLLARDS

WWW.BOLLARDWAREHOUSE.COM

In order to safely and effectively use any Bollard Warehouse product, please read and understand the General Warnings and Cautionary Statements contained below. If you have any questions about any of these General Warnings and Cautionary Statements, or about any aspect of Bollard Warehouse products or literature, please contact Bollard Warehouse at 877-727-7347, or email at sales@bollardwarehouse.com.



Bollard selection and placement based on vehicle weight, speed and other site specific factors to be determined by owner.



Failure to utilize Bollard Warehouse authorized parts, or modifications to the Bollard Warehouse products, or failure to follow the recommended installation procedures, will result in your warranty being null and void.



Read and fully understand the installation instructions before attempting to install any Bollard Warehouse bollard product.



Substitution of components may impair the proper function of Bollard Warehouse bollards products. If you need replacement parts, please contact Bollard Warehouse at the number and email above.



Always ensure that the lock pin is locked into place in the upright position with all collapsible bollards.



**WARNING:** Failure to return collapsible bollard to upright, locked position immediately after use poses a significant hazard.



Replacement lock pins are available for purchase at Bollard Warehouse. For purchase of replacement lock pins or other components, please contact Bollard Warehouse at the number or email above.




**CAUTION:** Lock pin must always be secured with padlock when bollard is in upright position.



For maximum effectiveness of Bollard Warehouse bollard products, be sure to properly maintain bollards by replacing any damaged, corroded or missing components, and reapply paint as required to maximize visibility. Failure to properly maintain product can negatively impact the bollards performance over time.



To ensure visibility of bollards, be sure to apply all decals that are provided with the product, and in the manner recommended by Bollard Warehouse.

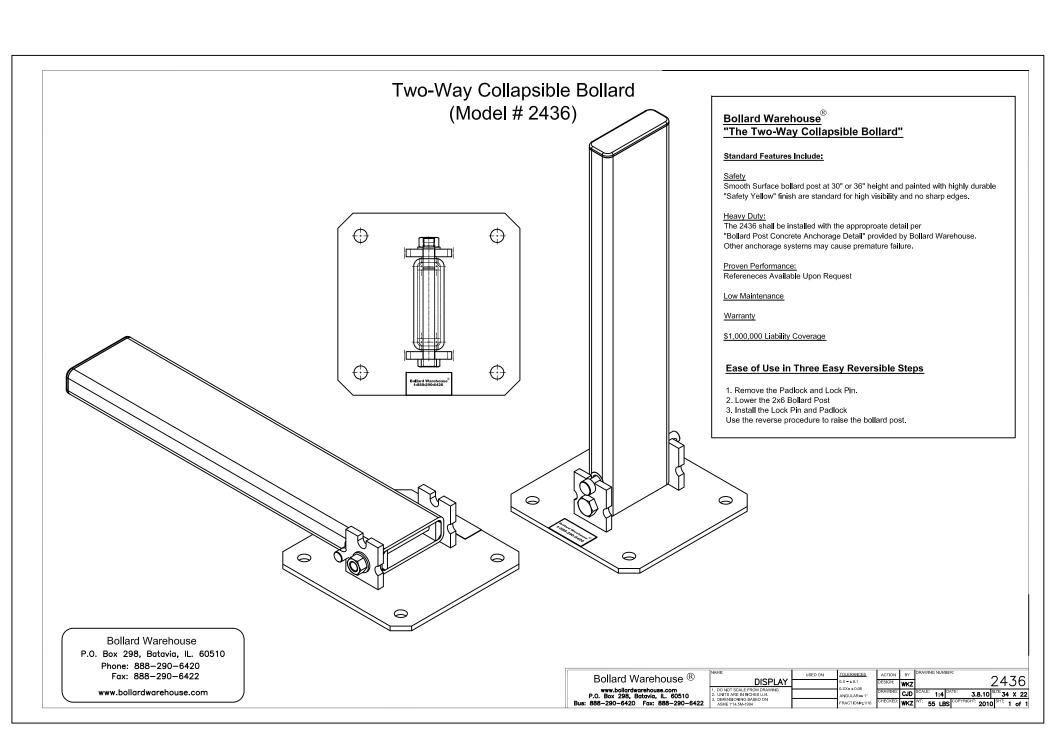


## **Installation Instructions:**

#### HINGED SINGLE POST BOLLARD

- 1. Verify that all Hinged Single Post Bollard parts are in the shipment package as shown on the "Bill of Material".
- 2. Provide Hinged Single Post Bollard Anchor System (see included Anchor System Drawing CPAS-2436) of your choice at a location to suit your specific needs.
- 3. Install Base Weldment (Item 2) true and level on your selected Anchor System using the flat washers and hex nuts included in your Anchor System Kit. Use S.S. shims to level if needed. Torque hex nuts to Minimum 100 ft-lbs for CPAS10 Anchor System. Torque hex nuts for other Anchor Systems to Manufacturers Specification.
- 5. Install Bollard Post Weldment (Item 1) to Base Weldment (Item 2) using Hex Head Bolt (Item 4), Hex Nut (Item 5), and Washer (Item 6) as shown. Tack Weld Hex Nut to Hinge Bolt or Chisel Hinge Bolt Threads such that Hex Nut cannot be easily removed.
- 6. Install Pin (Item 3) thru UP Position Bollard Post, and install Padlock at padlock hole.
- 7. Install the Label at the location shown.
- 8. Check the functional operation of the Hinged Bollard Post.
- \* Note: S.S. shims, tools, grease, and padlock are not provided.

Bollard Warehouse
P.O. Box 298, Batavia, IL. 60510
Phone: 888-290-6420
Fox: 888-290-6422

www.bollardwarehouse.com

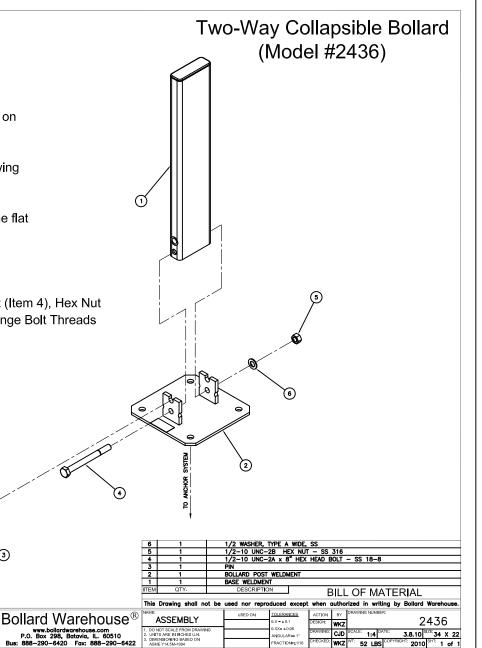

## **Bollard Warehouse**

P.O. Box 298, Batavia, IL. 60510

Phone: 888-290-6420 Fax: 888-290-6422

www.bollardwarehouse.com

## Footing Detail

FOR MODEL: 2436

CONCRETE PIER ANCHOR SYSTEM (CPAS-2436)

NOTE: CONCRETE, FORM AND REBAR PROVIDED BY OTHERS

